VIANTÉ

VIANTÉ

Auto Drip Coffee Maker

MODEL : CAF-05T

Instruction Manual

HOUSEHOLD USE ONLY

Vianté is very safety conscious
When using electrical appliances, to reduce the risk of fire, electric shock, and/or injury to person basic safety precautions should always be followed, including the following:

IMPORTANT SAFEGUARDS

- Read all instructions carefully.
- Do not touch hot surfaces.
- To protect against electric shock, do not place cord, plug or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before lifting or changing parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to authorized service facility for examination, repair or adjustment.
- Use only attachments recommended by manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near hot gas or electric burner, or in a heated oven.
- Always plug cord into the wall outlet before turning on any controls. To disconnect, turn power control to OFF, then unplug.
- Always use cold water to make coffee. Warm water or other liquids could cause damage to the coffee maker.
- Scalding may occur if the cover is lifted or removed during the brewing cycle.
- Do not use this appliance for other than intended use.
- Coffee maker must be operated on a flat surface away from the edge of counter to prevent accidental tipping.

IMPORTANT: Never use the coffee tank to carry or pour hot coffee. Handle coffee tank only when empty or containing cold water.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY
RETURN TO MANUFACTURER OR AUTHORIZED DEALER

SHORT CORD INSTRUCTIONS

A. We do not recommend using an extension cord with this device.
B. If an extension cord is absolutely necessary,
   (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the machine,
   (2) the longer cord should be arranged so that it will not drape over the countertop or table top where it can be pulled on by children or tripped over.
C. This machine has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit,contact a qualified electrician. Do not attempt to modify the plug in any way.

CAUTION: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT ATTEMPT TO DISASSEMBLE THE MACHINE.

CAUTION: SWITCH OFF THE MACHINE / AND DISCONNECT FROM POWER SUPPLY BEFORE CHANGING ACCESSORIES OR APPROACHING PARTS THAT MOVE IN USE.

PARTS AND FEATURES

PARTS AND FEATURES

LCD DISPLAY

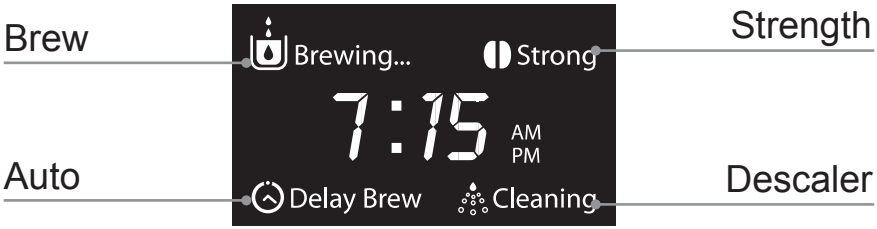

CONTROL PANEL

a. ON/OFF BUTTON
To start and stop brewing functions. When brewing, the backlight is blue and changes to orange when warming.

b. STRONG
Adjusts the brewing time to create a more full-flavored coffee.

c. SET DELAY
To set the timer.

d. DELAY BREW
Set the timer to automatically begin brewing up to 24 hours in advance.

e. CLEAN
ENABLES EASY CLEANING OF MINERAL DEPOSITS FROM COFFEE MAKER.

f. HOUR AND MINUTE BUTTONS
Set delayed brew time (hour and minute).

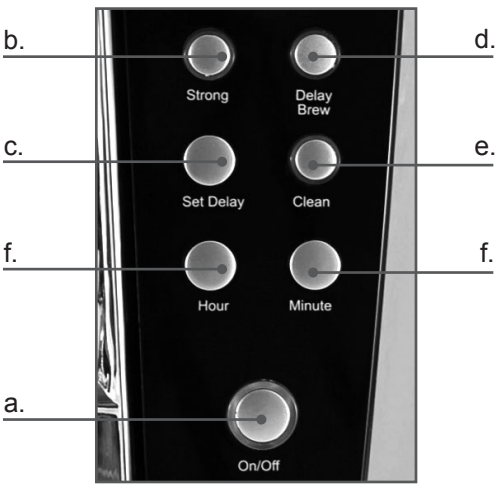

PREPARING YOUR COFFEE MAKER FOR USE

- Carefully unpack the coffee maker and remove all packaging materials.
- Before making coffee in your coffee maker, thoroughly clean the carafe, carafe lid and filter basket with warm, soapy water. Rinse and dry. Do not use harsh or abrasive cleaners.
- Wipe the warming plate with a clean, damp cloth. However, do not immerse the coffee maker in water or other liquid.
- Place coffee maker on a flat, level surface away from any edge.
- Plug the unit into a 120 volt 60 Hz AC only outlet.
- Prior to brewing your first pot of coffee, operate coffee maker once or twice with water but without ground coffee. This will remove any dust that may have settled inside the coffee maker that might affect the flavor of coffee.

IMPORTANT: Use cold water for best results.

To prevent clogging of filter basket, do not use finely ground coffee. Do NOT use paper filters. Properly clean gold tone filter after each use.

Caution: Never open the top cover during the brewing cycle, even if no water is draining from the filter basket, since extremely hot water/coffee can spill out from the filter basket and cause injury. If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening the top cover and checking the filter basket.

SETTING THE CLOCK AND DELAY BREW TIME

TO SET THE CLOCK:

1. Plug the power cord into a standard electrical outlet. The clock will flash on the control panel to indicate that the time has not been set.

2. Press and hold the ***HOUR*** (ⓑ) and ***MINUTE*** (ⓒ) buttons until you reach the current time. The ***AM*** or ***PM*** indicator will light up at the bottom of the display. The clock is now set!

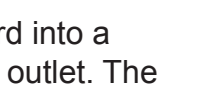

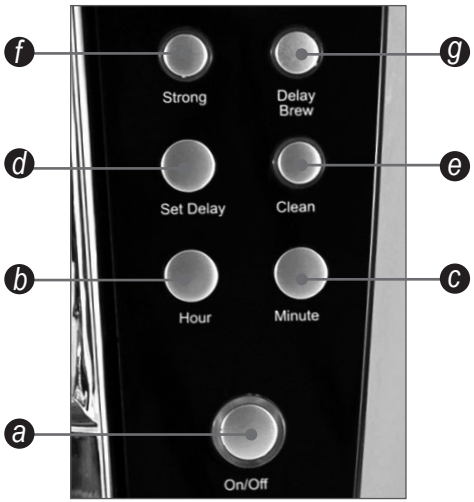

Note: Pressing any button before setting the clock will cause the clock to start keeping time from ***12:00 AM***. You must set the clock if you want to use the Delay Brew feature.

TO SET THE DELAY BREW TIME:

1. While the display is in the clock mode, press the SET Delay Button (ⓓ).

2. While the Delay Brew Time is flashing, set the desired brew time by pressing the Hour and Minute buttons. The AM or PM indicator will light up at the bottom of the clock display. Within a few seconds the display will change to the current time. The Delay Brew (ⓖ) Time is now set.

3. To check the programmed time, push the SET Delay (ⓓ)button. The display will show the time you have programmed the coffee to brew. If you press the SET Delay (ⓓ) button again or wait a few seconds, the display will switch back.

HOW TO MAKE COFFEE

1. Fill water reservoir with cold water. Do not exceed 10-Cup water level.

2. Open the coffee tank lid. Fill the filter basket with coffee, being careful not to get any grounds into the coffee tank.

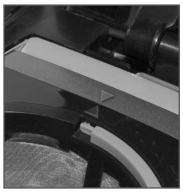

3. When placing the coffee filter into the coffee tank, maker sure the arrow marks on the coffee filter and coffee tank are aligned.

4. Close the coffee tank lid.

5. Press STRONG button (ⓕ) to increase the coffee flavor. Use this function when brewing fewer than 4 cups.

6. Press ON/OFF button (ⓐ) to begin brewing (light will glow).

CAUTION:
Do NOT open lid during and just after brewing to preserve the coffee's heat and flavor, and to avoid scalding from hot coffee and steam. Do NOT remove coffee tank while brewing light is on or coffee is hot.

7. Place cup under the tap and open to fill at desired level.

8. Before you lock the lid to the thermal carafe, make sure the arrow mark on the lid is aligned with the line on the handle of the thermal carafe.

9. When filling the Thermal Carafe, the spout must be located under the tap outlet.

NOTE:
The capacity of the Thermal Carafe is 10 cups. Do NOT put more than 10 cups in the coffee tank.

10. The coffee maker features a 2-hour automatic shut off. To turn off sooner, press the ON/OFF button (ⓐ) and indicator light will go out.

11. When finished, push ON/OFF button (ⓐ) to turn off, then unplug the coffee maker. Do not open coffeemaker until it has been turned off.

Always allow cooling before cleaning. Never use coffee tank to pour or carry hot coffee. Handle coffee tank only to clean it after machine has been shut off and the coffee is cool.

HINTS FOR GREAT TASTING COFFEE

- A clean coffee maker is essential for making great tasting coffee. Regular cleaning, as specified in “Cleaning your Coffee Maker” is highly recommended.

- Always use fresh, cold water in your coffee maker.

- Fine grround coffee promotes fuller extraction and provides rich, full-tasting coffee. Regular grind will require slightly more coffee per cup to provide the strength of a finer grind.

- Store coffee in a cool, dry place. Once coffee has been opened, keep it tightly sealed in the refrigerator to maintain freshness.

- Do not re-use coffee grounds since this will greatly impair coffee flavor.

- Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.

- Small oil droplets on the surface of brewed black coffee are due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffee is used. Over extraction may also cause oiliness, indicating a need to clean your coffee maker.

CLEANING AND MAINTENANCE

The “clean” light will flash to indicate that the coffee maker needs to be cleaned. The “clean” light will turn off after the clean cycle has been completed.

DECALCIFYING COFFEE MAKER

Minerals (calcium/limestone) found in water will leave deposits in coffee maker and affect its performance. It's recommended that you regularly remove these deposits using a cleaner.

1. Follow package instructions to prepare one batch of Cleaner. Pour the mixture into the water reservoir.

NOTE: 4 cups or 20 fl. Oz. of undiluted, white household vinegar may be used as a substitute for the cleaner.

2. Place filter basket into the coffee tank and close the brew basket lid.
3. Press the "Clean" button until the blue light turns on. The cleaning cycle is automatic.

The entire cycle will take 45-60 minutes to complete. During the cleaning your coffeemaker will:

a. Slow brew approx. 3 cups of cleaning solution.
b. Pause for 30 minutes (the Clean light will remain on to alert you that the process is active).
c. After 30 minutes, your coffeemaker will brew the remainder of the cleaning solution.
d. When complete, the clean light will turn off and your coffeemaker will turn off.

4. Discard the cleaning solution and rinse the decanter thoroughly with clean water.
5. Fill the water reservoir with clean, fresh water.
6. Replace the empty coffee tank.
7. Begin brewing and allow the full brew cycle to complete.
8. Repeat steps 4 through 7 one more time to clean the coffeemaker.

Your coffeemaker is now clean and ready to brew the next pot of delicious, hot coffee.

LIMITED WARRANTY

Vianté Home Products Company, hereafter noted as Vianté, warrants each appliance to be free from defects in material and workmanship for a period of ONE YEAR.

Our obligation under this warranty is limited to repair at our factory or authorized service center of any defective parts unless the parts have been damaged through misuse or damaged in transit.

In the event of a product replacement or return, all freight charges must be prepaid. The repaired or replacement model will be returned at Vianté expense.

This warranty is conditional upon proper use and care in accordance with instruction manual directions, which accompany the unit and only the use by the original purchaser.

For Service: Please call Turnpike Appliance at 516 486-5700 for the authorized service center near you.

For more Information, please contact

J.K.Mc Cusker Viante Home Products Company Suffern, NY

845-357-0315 or JKM@vianteusa.com

CasaVIANTÉ | CucinaVIANTÉ | CafeVIANTÉ